

WANG

WCS/30  
INTRODUCTION  
& INSTALLATION  
GUIDE

# SYSTEM 2200





# **WCS/30 INTRODUCTION & INSTALLATION GUIDE**

© Wang Laboratories, Inc., 1976



LABORATORIES, INC.

---

836 NORTH STREET, TEWKSBURY, MASSACHUSETTS 01876, TEL. (617) 851-4111, TWX 710 343-6769, TELEX 94-7421

## **Disclaimer of Warranties and Limitation of Liabilities**

The staff of Wang Laboratories, Inc., has taken due care in preparing this manual; however, nothing contained herein modifies or alters in any way the standard terms and conditions of the Wang purchase agreement, lease agreement, or rental agreement by which this equipment was acquired, nor increases in any way Wang's liability to the customer. In no event shall Wang Laboratories, Inc., or its subsidiaries be liable for incidental or consequential damages in connection with or arising from the use of this manual or any programs contained herein.



LABORATORIES, INC.

 
836 NORTH STREET, TEWKSBURY, MASSACHUSETTS 01876, TEL. (617) 851-4111, TWX 710 343-6769, TELEX 94-7421

## TABLE OF CONTENTS

		Page
1.	INTRODUCTION. . . . .	1
1.1	UNPACKING, INSPECTION, AND INSTALLATION . . . . .	2
1.2	INSTALLATION GUIDE. . . . .	2
	Selecting a Location. . . . .	2
	Controlling the Environment . . . . .	2
	Electrical Environment. . . . .	3
2.	WCS/30 HARDWARE . . . . .	4
2.1	THE CENTRAL PROCESSOR . . . . .	4
2.2	THE INTEGRATED CRT DISPLAY. . . . .	4
	Cleaning the CRT. . . . .	4
	Moving the Cursor . . . . .	5
2.3	THE INTEGRATED ALPHANUMERIC/BASIC KEYWORD KEYBOARD. . . . .	5
2.4	DISK DRIVES . . . . .	7
	Physical Characteristics. . . . .	8
	Storage Capacity. . . . .	8
	Speed . . . . .	8
	File Maintenance. . . . .	9
	Reliability . . . . .	9
2.5	PRINTER . . . . .	9
2.6	WCS/30 INSTRUCTION SET. . . . .	10
	General BASIC Statements. . . . .	10
	BASIC Commands. . . . .	10
	Tape Cassette Commands and Statements . . . . .	10
	Disk Statements . . . . .	10
	The Matrix Instruction Set. . . . .	11
	The General I/O Instruction Set . . . . .	11
	The Character EDIT Instruction Set. . . . .	12
	The SORT Instruction Set. . . . .	12
2.7	MATHEMATICAL FUNCTIONS. . . . .	12
	Arithmetic Operators. . . . .	12
	Relational Symbols. . . . .	13
2.8	ALPHANUMERIC FUNCTIONS. . . . .	13
3.	TURN-ON PROCEDURE . . . . .	13
4.	SYSTEM OPERATION. . . . .	13
4.1	MASTER INITIALIZATION . . . . .	13

4.2	THE COLON . . . . .	14
4.3	THE EXECUTE KEY . . . . .	14
4.4	SPACING . . . . .	15
4.5	TWO MODES OF OPERATION. . . . .	15
	Immediate Mode. . . . .	15
	Program Mode. . . . .	15
4.6	A KEYSTROKE . . . . .	17
4.7	A KEYWORD . . . . .	17
4.8	A BASIC STATEMENT . . . . .	17
4.9	A BASIC COMMAND . . . . .	18
4.10	A BASIC FUNCTION. . . . .	18
4.11	ENTERING PROGRAM LINES. . . . .	19
4.12	EXECUTING A PROGRAM . . . . .	19
4.13	EDITING PROGRAMS. . . . .	20
	Deleting a Program Line . . . . .	20
	Replacing and Changing a Line . . . . .	20
	Using Edit Mode . . . . .	20
4.14	LISTING PROGRAMS. . . . .	22
	Listing a Program on the CRT. . . . .	22
	Listing a Program on a Printer. . . . .	22
	Debugging . . . . .	22
	Programmable Pause. . . . .	26
4.15	SUMMARY . . . . .	27
5.	SYSTEM MANUALS. . . . .	27
5.1	WANG BASIC LANGUAGE PROGRAMMING MANUAL. . . . .	28
5.2	BASIC LANGUAGE REFERENCE MANUAL . . . . .	28
5.3	MATRIX STATEMENTS . . . . .	28
5.4	GENERAL I/O INSTRUCTION SET . . . . .	29
5.5	CHARACTER EDIT REFERENCE MANUAL . . . . .	29
5.6	SORT STATEMENTS . . . . .	29
5.7	DISK MEMORY REFERENCE MANUAL. . . . .	29
5.8	2221W LINE PRINTER REFERENCE MANUAL . . . . .	30

6.	SOFTWARE. . . . .	30
7.	OPTIONS AND PERIPHERALS . . . . .	30
	Memory. . . . .	30
	CPU/Keyboard/Display Options. . . . .	30
	Display Peripheral. . . . .	30
	Output Peripherals. . . . .	30
	Interface Controllers . . . . .	30
	Input Peripherals . . . . .	31
	Mass Storage Peripherals. . . . .	31
8.	SPECIFICATIONS. . . . .	31
	WCS/30 Central Processing Unit. . . . .	31
	WCS/30 Fixed/Removable Disk Drive . . . . .	32
	WCS/30 Diskette Drive . . . . .	32
	Size of WCS/30 Console & CPU & Storage. . . . .	33
	Weight. . . . .	33
	Power Requirements. . . . .	33
	Fuses . . . . .	33
	Operating Environment . . . . .	33
9.	PREVENTIVE MAINTENANCE INFORMATION. . . . .	33
10.	CONCLUSION. . . . .	34





## 1. INTRODUCTION

Wang Laboratories, Inc. welcomes you to the community of Wang users. You have entered the world of small computers by purchasing the Wang Computer System, WCS/30, which provides you with a powerful tool for developing new and more advanced methods for managing your daily activities.

The WCS/30 features a 16K Central Processing Unit (CPU) with a "hardwired" Extended BASIC language interpreter, an operator console comprised of a 1,024-character Cathode Ray Tube (CRT) Display and a keyboard, a diskette drive for offline program and data storage, a 5-megabyte disk for mass storage, and a 132-column line printer - all in three coordinated, compact and attractive pieces of office furniture.

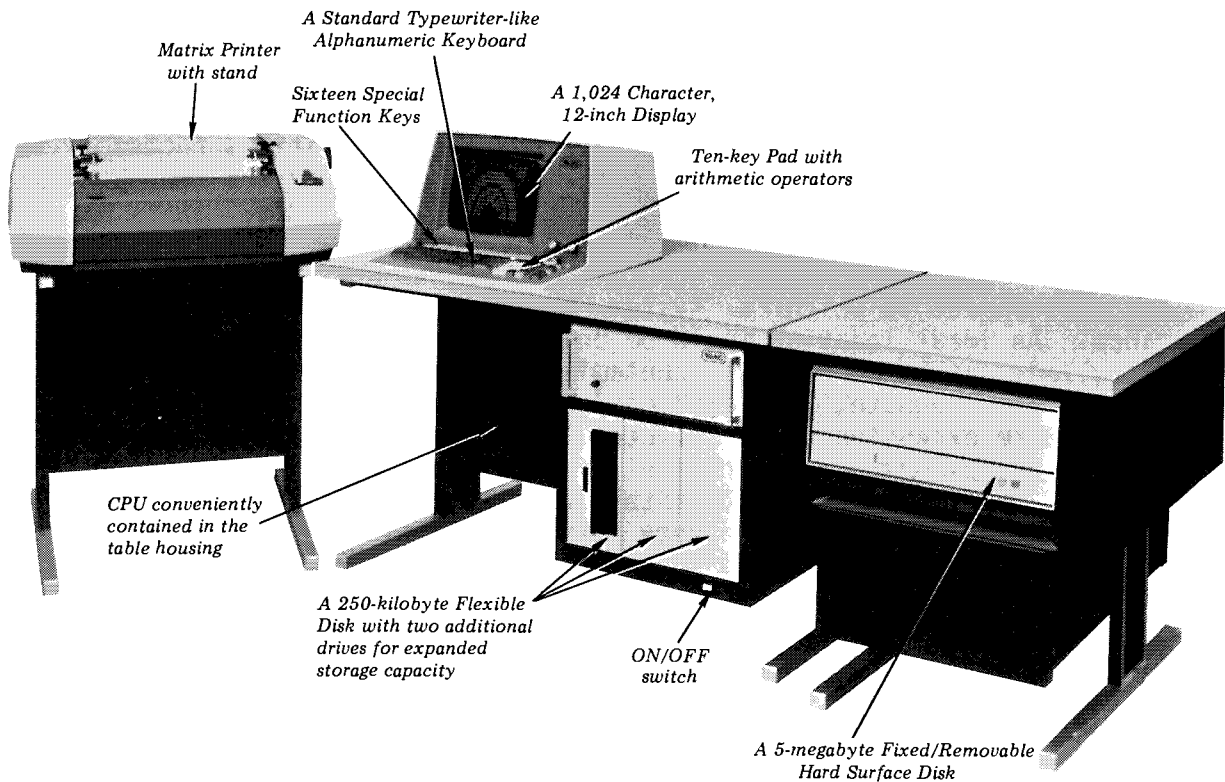


Figure 1.1 The WCS/30

## 1.1 UNPACKING, INSPECTION, AND INSTALLATION

Your system must be unpacked, inspected, and installed by a Wang Service Representative. Upon receipt of your system, be sure to notify your Service Representative so that he may perform this service. Failure to follow this procedure will void your warranty.

Your Service Representative will ensure that the connectors for any peripherals are properly connected to the CPU and locked in place, that power cords are properly plugged into a source of power and that the main power cord of the CPU is correctly attached to your system's power supply. It is recommended that your system be connected to a power line reserved exclusively for its use; the line should not be shared by other office equipment such as water coolers, calculators, typewriters, and copiers.

## 1.2 INSTALLATION GUIDE

When your WCS/30 is delivered, it is not sufficient to merely find floor space for it and insert the plugs into an AC outlet. Some preparation prior to delivery is necessary to select a suitable location for the system and to determine if the AC power lines are adequate. The following describes the environment in which a system must operate and the preparations necessary to meet these criteria.

### Selecting a Location

The environment in which a system operates can greatly effect its performance. An ideal location would be one in which temperature and humidity are controlled; airborne dirt and contaminants are reduced to a minimum; the power outlets are adequate, regulated, and noise free; and there is enough room for future expansion. The selected location should also be one that is easily accessible by operating personnel, yet sufficiently removed from the main flow of traffic so as not to interfere with the smooth operation of the system. Such locations are indeed very difficult to find, and as a result, the system must often be installed in a less than favorable environment.

### Controlling the Environment

Once a location is selected, the three factors that need to be considered are temperature, humidity, and cleanliness.

The temperature is the most important factor to consider because it can vary greatly from day-to-day. The recommended operating temperature range is from 65°F to 75°F, but the allowable range is from 50°F to 90°F. Low outside temperatures are usually not a problem because nearly all locations are heated. High temperatures can be a problem because many locations do not have air conditioning. If the system is used where temperatures exceed the maximum specified, component failure rates will drastically increase, resulting in costly downtime for the user. High temperatures can also cause warpage and distortion of data storage material, resulting in lost data.

If an air conditioning unit is already installed or if one is to be installed, it is imperative that a separate power line be used. If a separate power line is not used, system errors will occur when the air conditioning is in use.

While air conditioning is good for maintaining the proper temperature, it also removes moisture from the air, thereby lowering the humidity. If the system is installed in a carpeted room, the lower humidity plus the static generating capability of carpets and synthetic clothing impart a static electrical charge on operating personnel. When the operator comes in contact with the system, the resultant static discharge is not only uncomfortable, but will cause system malfunctions and the destruction of recorded data.

If carpeting is to be installed, be sure it is a non-static variety. If carpeting already exists and it is not a non-static carpet, it will either have to be treated with a non-static spray or an electrically conductive mat must be installed to prevent a static charge build-up. Carpets treated with non-static spray should be thoroughly cleaned before the first treatment, and retreated at least once every three months, thereafter. If an electrically conductive mat is used, it should be installed under the system operating area and must be properly connected to an earth ground.

The recommended humidity range is from 40% to 60% R.H., but 20% to 80% R.H. is allowable. (In cold weather, the humidity in heated buildings can be 10% or lower.) Low humidity not only increases the certainty of static build-up, but also can cause oxide shed in data storage material. Humidifiers and dehumidifiers should be installed to increase or decrease the humidity as required.

Dirt and grease can accumulate rapidly on circuit boards and components, and can form a film that prevents heat dissipation from components and also creates a leakage path for signals. They also can cause excessive mechanical wear in tape and disk drives and scratches in the oxide coating of the storage material and on the read/write heads.

To prevent unnecessary failures due to dirt, all air conditioning, heating and ventilating units should have air filters installed; these filters should be cleaned or replaced regularly. In areas where filters do not remove airborne dirt sufficiently, an electrostatic filter should be installed.

### Electrical Environment

For most Wang systems, a 20 ampere, 115 VAC power line is adequate. Further system requirements dictate that this line must be regulated to within  $\pm 10\%$  and must be noise free. It is strongly recommended that the system have its own AC power line.

If the line is not sufficiently regulated to the limits indicated above, a constant voltage transformer should be installed. If the line is noisy, however, a detailed analysis of the problem must be performed to insure a correct solution.

Since computers and peripherals are extremely susceptible to Electromagnetic Interference (EMI), the source of the EMI must be determined

before a solution is proposed. EMI can enter the system by conduction along wiring and cabling or by direct radiation. If sources of EMI, which include office machines, air conditioning units, electric motors, machinery and arc welders, are in close proximity to the system, EMI will enter by direct radiation. The noise generating device should be relocated, repaired or filtered to prevent it from interfering with the system. If the source of the noise cannot be found, an EMI filter with a cut-off frequency near 10 KHz should be installed on the system's AC power line. In all cases, be sure the AC power line has been properly installed in steel conduit and the conduit is properly connected to junction boxes. Also, insure that other devices, including fluorescent lighting, are not connected to the AC power line. In extreme cases, such as where arc welders are used in the vicinity, it may also be necessary to shield the peripheral cables.

## 2. WCS/30 HARDWARE

### 2.1 THE CENTRAL PROCESSOR

The nucleus of the WCS/30 is a Central Processing Unit consisting of four parts - a central processor, a data memory (RAM), a control memory (ROM) containing the BASIC Interpreter, and a set of I/O (input/output) controllers. RAM (Random Access Memory) contains 16K (16,384) bytes of data memory, expandable in 8K increments up to 32K bytes. The powerful 42.5K BASIC Interpreter is resident in a separate ROM (Read Only Memory) area of the CPU, and by "hardwiring" the interpreter, the time and space necessary to "page" the system in and out of user memory is eliminated. Approximately 700 bytes of the user area (RAM) are allocated for system use. Finally, in the same chassis as the CPU are controllers for the I/O devices. Every peripheral attached to your CPU such as the keyboard and video display, tape and disk drives, etc., is directly connected to the CPU via its own controller interface.

### 2.2 THE INTEGRATED CRT DISPLAY

The Integrated CRT Display is designed to display up to 1024 characters of data or program text. With it, you can write, review, modify, and correct programs speedily and easily. It contains a screen with two controls used to set brightness and contrast. The screen can hold a maximum of 16 lines, each 64 characters long. Lines are displayed sequentially on the screen. If more than sixteen lines are input at any one time, when the last line is filled, a new line is added to the bottom of the CRT, and all previously entered lines move up a line.

#### Cleaning the CRT Screen

The CRT screen should be cleaned periodically with a mild soap and water using a soft cloth. Do not use an alcohol pad or abrasive compound which can cause damage to the rim surrounding the screen.

WARNING:

Do not attempt to remove the cover of your console for any reason due to the danger of high voltage. Call your Wang Service Representative if any maintenance is required.

### Moving the Cursor

Cursor movement can be issued to the CRT using the PRINT HEX code (see BASIC Language Reference Manual):

HEX CODE	COMMAND
01	home cursor
03	clear screen and home cursor
08	cursor left ( )
09	cursor right ( )
0A	cursor down ( )
0C	cursor up ( )

For example, PRINT HEX(03) clears the CRT and places the cursor at the home position (upper-left of the screen).

### 2.3 THE INTEGRATED ALPHANUMERIC/BASIC KEYWORD KEYBOARD

The Integrated Keyboard provides two modes of operation for entering data and programs into the Central Processing Unit. Mode is selected by use of the toggle switch labelled Keyword/A and A/a at the upper-left corner of the keyboard.

When the toggle switch is set to Keyword/A, each touch of a key on the keyboard produces either a BASIC language keyword (if the SHIFT Key is depressed) or an uppercase letter (if the SHIFT Key is not depressed). This mode must be used for entering programs.

When the toggle switch on the keyboard is set to A/a, the keyboard acts like a typewriter. Each touch of a key produces an uppercase letter on the CRT (if the SHIFT Key is depressed) or a lowercase letter (if the SHIFT Key is not depressed). This mode must be used if lowercase data entry is desired.

During most operations, the system is normally in Console Input Mode. In this mode, program lines, commands or data lines are entered. When each line has been completely keyed in, the RETURN(EXEC) key is touched; this causes the system to accept and process the line.

Data can be entered from the keyboard into memory each time a running BASIC program in the system executes an INPUT statement. As with program lines, each line is terminated by touching the RETURN(EXEC) key; this causes the system to accept and process the data line.

The keyboard is divided into four zones as follows:

- ZONE 1 Contains all alphanumeric characters, special characters (e.g., #, \$, %, etc.), many BASIC language keywords (e.g., PRINT USING, FOR, etc.), and some operations keys (STMT NUMBER, TRACE, RENUMBER, LIST, BACKSPACE(), LINE ERASE, and RETURN(EXEC)).
- ZONE 2 Contains a full numeric keyboard, the mathematical function keys (ARC, SIN(, COS(, etc.), the arithmetic operators (+, -, \*, /), a RETURN(EXEC) key and a keyword PRINT key.
- ZONE 3 Contains the operation keys for loading, executing and controlling a program during execution.
- HALT/STEP Stops program execution after completion of the current statement, and is used to step through a program one statement at a time.
- CONTINUE Continues program execution after encountering a STOP or having used HALT/STEP, and must be followed by a RETURN(EXEC).
- CLEAR When followed by no parameters, clears all program text and variables. When followed by V, removes all variables from memory. When followed by N, removes all non-common variables from memory. When followed by P, removes program text but not variables. Must be followed by RETURN(EXEC).
- LOAD Loads a program from currently selected tape unit into memory, and must be followed by RETURN(EXEC).
- RUN Initiates execution of user program in memory, and must be followed by RETURN(EXEC).
- ZONE 4 Contains 16 Special Function Keys which are used to access up to 32 user-defined routines. To be used, a Special Function Key must be defined by the user with a DEFFN' statement in the currently loaded program. Special Function Keys can be used to start program execution, to enter and execute subroutines, and to enter a string of text characters.

Also contains the EDIT Mode keys which permit discrete line editing. Individual alphanumeric characters in a line of program text resident in memory, or in data values of program text currently being entered from the keyboard, can be altered, inserted, or deleted, without retyping the entire line.

Also contains the RESET pushbutton switch (upper-right) which immediately stops program execution, listing and I/O operations, clears the CRT, and returns control to the user (Console Input Mode). Program text and variables are left intact. RESET generally should not be used to terminate program execution; HALT/STEP should be used for this purpose.

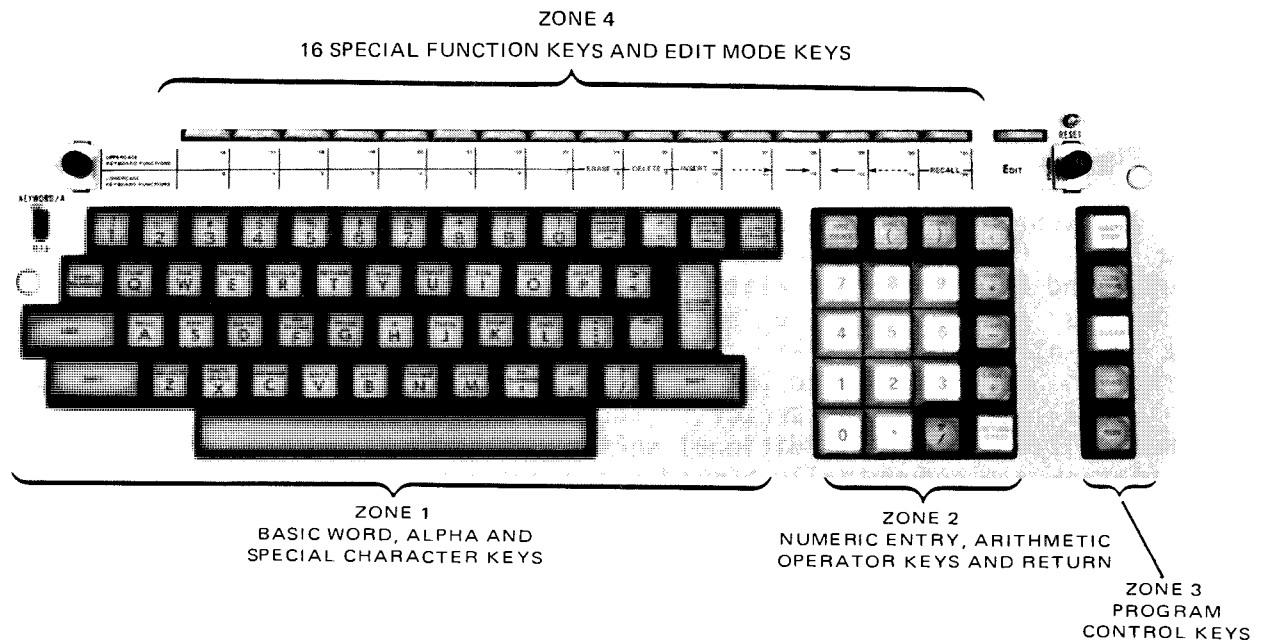


Figure 2.1 The Integrated Alphanumeric/BASIC Keyword Keyboard

Each of the keywords on the Integrated Alphanumeric/BASIC Keyword Keyboard is described in the Wang BASIC Language Reference Manual. Note that there are two RETURN(EXEC) Keys, one in Zone 1 and the other in Zone 2 of the keyboard. Their operation is identical. There are also two BACKSPACE keys in Zone 1. The one in the upper-right of Zone 1 is used to backspace the cursor, and the one in the lower-left of Zone 1 is used to backspace a file or record on tape.

When entering programs with the Integrated Alphanumeric/BASIC Keyword Keyboard, most compound keywords (such as DATALOAD) can be entered by touching the keys DATA and LOAD, but the keyword PRINTUSING must be entered either by using the PRINTUSING key or by entering it one character at a time.

Finally, certain keys on the Integrated Alphanumeric/BASIC Keyword Keyboard cause immediate action, and do not require a RETURN(EXEC) key for execution. They are: RESET, HALT/STEP, Special Function Keys, Edit Mode Keys, BACKSPACE, LINE ERASE, and STMT NUMBER. (BACKSPACE removes the current character or keyword. LINE ERASE removes the current line. STMT NUMBER enters a line number for the next line to be keyed in - the highest line number + 10.)

## 2.4 DISK DRIVES

Included with the WCS/30 is a 250 kilobyte diskette unit and a 5 megabyte fixed/removable hard-surface disk providing high-speed, direct-access, external storage. (A 10 megabyte fixed/removable hard-surface disk also is available for greater storage requirements.) The use of removable disks provides an offline program and data storage capacity limited only by the number of disks one has on hand, and the inclusion of a diskette drive allows a media-interchange mechanism between systems and data entry devices.

## Physical Characteristics

The WCS/30 disk component comprises three separate disk platters - a Fixed Disk Platter, a Removable Disk Platter, and a Diskette Platter. (The Diskette and Removable Disk Platters can be replaced by the user.) Each disk platter is divided into a series of concentric circular tracks, with each track segmented into twenty-four 256-byte sectors (16 sectors for diskette). Information is transferred to and from the disk in blocks of 256-bytes, with each block occupying a sector. Records of more than 256 bytes are automatically allocated additional sectors as needed, and the sectors on each disk platter are sequentially numbered and randomly accessible.

## Storage Capacity

The total online capacity of the WCS/30 disk unit is 5,275,648 bytes - 2,506,752 reside on the Fixed Disk Platter; 2,506,752 on the Removable Disk Platter; and 262,144 on the Diskette Platter.

It is difficult to translate the available storage in bytes into the precise amount of alphanumeric or numeric information which can be stored on the disk unit, since this figure is determined by several factors, including the type of information and the method of storage. In general, each full-precision number (13 digits) requires nine bytes of storage on a disk, and each literal string requires one byte for each character plus one additional byte (e.g., a literal string containing 16 characters requires 17 bytes of disk storage). Thus, the WCS/30 fixed/removable disk can store about 557,000 full-precision numbers or 295,000 16-character literal strings. However, the amount of storage required by individual numbers can be reduced to as few as two bytes per number with the PACK statement, if a full 13 digits of precision are not required.

## Speed

Information is transferred to and from the disk at high speed. The total time required to read or write an item of data on disk can be broken down into two components - the Track Access Time and the Disk Latency Time.

The Track Access Time is the time required to position the read/write head to a specified track on the disk platter. The "average access time" is the time required for the read/write head to move from track #0 to the middle track on a disk platter. For the WCS/30 fixed/removable disk, the average access time is 41 ms (about .04 second) and for the diskette unit, 401 ms (about 0.4 second). If information is written or read sequentially on a platter, access time is minimized.

The Disk Latency Time is the time required for the desired sector on a track to rotate to the read/write head. The "average latency time" is the time required for a sector which is one-half track away from the read/write head to rotate to the read/write head. Since the fixed or removable platter makes one complete revolution in 40 ms, the average latency time is one-half this time or 20 ms (0.02 second), and for the diskette unit, 80 ms (0.08 second). The staggered arrangement of sequential sectors on a track (which is transparent to the user software) makes it possible to read or write multi-sector records with significant savings in total latency time.



## File Maintenance

Files can be maintained on disk in one (or both) of two modes: Automatic File Cataloging Mode and Absolute Sector Addressing Mode. The BASIC commands and statements in both modes are built into the Wang Computer System/30.

Automatic File Cataloging includes 17 BASIC statements and commands which constitute an internal data management system. Catalog Mode permits the user to save and load programs or data files by name, without concern for where or how the files are actually stored on disk or the actual sector address of the data. (This information is recorded in a special "catalog index" which is automatically maintained by the system itself.)

Absolute Sector Addressing includes eight BASIC statements which permit the programmer to address specific sectors on disk, thus enabling him to design his own data management system. Two Absolute Sector Mode statements are provided which make possible the saving and loading of unformatted data. This enables the programmer to include his own control information in individual records.

## Reliability

Although the Disk Unit is an extremely reliable device, both cyclic redundancy (CRC) and logical redundancy (LRC) checksum tests are made automatically on all data read from the disk. If a CRC error is detected in a sector, the sector is automatically reread four times before an error is signalled. An additional read-after-write verification test can be optionally specified by the programmer simply by including a single parameter in the appropriate BASIC statement or command.

## 2.5 PRINTER

The Line Printer provides complete, high-speed, alphanumeric printing capability to the Wang Computer System/30. It prints characters composed of a 9 by 9 dot matrix at a rate of approximately 200 characters per second, with limits between 65 and 300 lines per minute, depending upon the line length (i.e., 65 lpm for a 132-character line and approximately 300 lpm for a 10-character line). Maximum line length is 132 characters. The WCS/30 printer is capable of printing a fully-formatted alphabetic and numeric character set under program control, and has a 96-character set including uppercase and lowercase letters.

Since the WCS/30 printer uses a matrix impact printing technique, as many as four carbon copies can be generated simultaneously with the original. Proper registration of printed material on all copies is guaranteed by pin-feed units, the distance between which is continuously adjustable from 5 to 14.5 inches (12.70 to 36.83 cm). Paper is automatically advanced from one line to the next, controlled by a punched mylar tape loop.

In addition to producing program output, the WCS/30 printer also can be instructed to LIST programs (the text lines to be listed are specifiable) and serve as Console Output (in which case, every keystroke from the keyboard, whether under program control or in Immediate Mode, is printed out just as it would appear on the CRT).

## 2.6 WCS/30 INSTRUCTION SET

### General BASIC Statements

ADD	GOTO	POS
AND	HEXPRINT	PRINT
BIN	IF END THEN	PRINT USING
BOOL	IF THEN	READ
COM	% (Image)	REM
COM CLEAR	INIT	RESTORE
CONVERT	INPUT	RETURN
DATA	KEYIN	RETURN CLEAR
DEFFN	LET	ROTATE
DEFFN'	NEXT	SELECT
DIM	ON GOTO/GOSUB	STOP
END	ON ERROR	TRACE
FOR	OR	UNPACK
GOSUB	PACK	XOR
GUSUB'	PLOT	

### BASIC Commands

CLEAR	LIST	RUN
CONTINUE	RENUMBER	
HALT/STEP	RESET	

### Tape Cassette Commands and Statements

BACKSPACE  
DATALOAD  
DATALOAD BT  
DATA SAVE  
DATASAVE  
DATASAVE BT  
IF END THEN  
LOAD (command)  
LOAD (statement)  
REWIND  
SAVE (command)  
SKIP

### Disk Statements

#### Automatic File Cataloging Mode Commands and Statements

DATALOAD DC  
DATALOAD DC OPEN  
DATASAVE DC  
DATASAVE DC CLOSE  
DATASAVE DC END  
DATASAVE DC OPEN  
DBACKSPACE  
DSKIP  
LIST DC  
LOAD DC (statement)

LOAD DC (command)  
 MOVE  
 MOVE END  
 SAVE DC  
 SCRATCH  
 SCRATCH DISK  
 VERIFY

#### Absolute Sector Addressing Mode Statements

COPY  
 DATALOAD BA  
 DATALOAD DA  
 DATASAVE BA  
 DATASAVE DA  
 LIMITS  
 LOAD DA  
 SAVE DA

#### The Matrix Instruction Set

MAT + - matrix addition.  
 MAT CON - provides the constant matrix (every element a one).  
 MAT = - matrix equivalence.  
 MAT IDN - the identity matrix (main diagonal ones).  
 MAT INPUT - rapid data input can be effected.  
 MAT INV,d - the inverse and determinant of a matrix are output.  
 MAT \* - matrix multiplication.  
 MAT PRINT - output can be produced.  
 MAT READ - rapid data input can be effected.  
 MAT REDIM - array size can be changed.  
 MAT ( ) \* - matrix scalar multiplication.  
 MAT - - matrix subtraction.  
 MAT TRN - matrix transposition.  
 MAT ZER - the zero matrix (every element a zero).

#### The General I/O Instruction Set

\$GIO - a generalized I/O statement designed to perform data input, data output, and I/O control operations with a programmable Signal Sequence.  
 \$IF ON - a statement designed to test the device-ready condition of a specified output device or test the data-ready condition of a specified input device and initiate a branch to a specified line number if a ready condition is sensed.  
 \$TRAN - a statement designed to facilitate high-speed character code translations.  
 \$PACK - statements designed to facilitate data packing and unpacking by fields or delimiters, between a specified alphanumeric array buffer and specified arguments in an argument list.  
 \$UNPACK

## The Character EDIT Instruction Set

(Multispace left)	←----	-	moves cursor five spaces to the left.
(Multispace right)	-----→	-	moves cursor five spaces to the right.
(Space left)	←	-	moves cursor one space to the left.
(Space right)	→	-	moves cursor one space to the right.
INSERT		-	expands a line to allow for additional text or data.
DELETE		-	deletes character at the current cursor position.
ERASE		-	erases a program or data line from the current cursor position.
RECALL		-	recalls a program line already in memory.

## The SORT Instruction Set

MAT CONVERT	-	converts numeric to alpha array, and places items in sort format.
MAT COPY	-	transfers data by bytes from one array to another.
MAT MERGE	-	creates a locate-mode array to be used by MAT MOVE in performing a merge operation.
MAT MOVE	-	moves array elements from one array to another.
MAT SEARCH	-	seeks certain substrings in an array and stores their locations.
MAT SORT	-	creates a locate-mode array which gives the location of array elements in sorted order.

## 2.7 MATHEMATICAL FUNCTIONS

LOG	-	natural logarithm
ABS	-	absolute value
SQR	-	square root
RND	-	random number
INT	-	greatest integer function
SGN	-	assigns 1 if positive, 0 if zero, or -1 if negative
EXP	-	$e^x$
#PI	-	$\pi$ (3.14159265359)
SIN	-	sine*
COS	-	cosine*
TAN	-	tangent*
ARCSIN	-	arcsine*
ARCCOS	-	arccosine*
ARCTAN	-	arctangent*

(\*trig arguments: degrees, radians, gradians.)

### Arithmetic Operators

↑	exponentiation
*	multiplication
/	division

- + addition
- subtraction
- = assignment symbol

### Relational Symbols

- = equal
- < less than
- <= less than or equal to
- > greater than
- >= greater than or equal to
- <> not equal

## 2.8 ALPHANUMERIC FUNCTIONS

STR  
LEN  
HEX  
VAL  
NUM

## 3. TURN-ON PROCEDURE

Your system is turned on and Master Initialized with a single switch on the right-front panel of your console (see Figure 1.1).

When your WCS/30 is turned on, :READY appears on the display after about 15 seconds. Your WCS/30 is now ready to use.

### NOTE:

If the READY display does not appear, touch the RESET button. If it still does not appear, Master Initialize again (turn power off, then on again). If your system still does not operate, check your installation and try again. If your system still does not operate, call your Wang Service Representative.

(See appropriate manuals to activate Printer and Fixed/Removable Disk.)

## 4. SYSTEM OPERATION

### 4.1 MASTER INITIALIZATION

When your system is off, all programs and data in memory are cleared. Once the system is turned on, Master Initialization occurs. Master Initialization sets default values for line length and the length of alphanumeric variables and establishes a table containing the default addresses for the following peripherals:

Primary Device	Default Address
Keyboard	001
CRT	005
Cassette Drive	10A
Disk Drive	310
Plotter	413

Default value for line length is 64 characters; default length for alphanumeric variables is 16 bytes.

Default addresses and line length can be changed with a SELECT statement (see the BASIC Language Reference Manual), but unless there are I/O devices other than those listed, there is no need to change the default addresses. To alter the length of specific alphanumeric variables from the default value, a DIM or COM statement is used (see the BASIC Language Reference Manual). Numeric variables are set to zero, and alphanumeric variables are set to spaces when a program is executed, unless specific values are assigned to them.

#### 4.2 THE COLON

Once your system has been Master Initialized, the colon (:) is displayed. This indicates that the system is ready to receive BASIC statements or commands. The colon is also used when inputting statements to separate several BASIC statements occurring on the same program line.

Example:

```
:10 PRINT A
:20 A,B=1 :G2=A+B
```

#### 4.3 THE EXECUTE KEY

The Execute Key is used to terminate every line input to the system. On the Integrated Alphanumeric/BASIC Keyword Keyboard, it is called the RETURN(EXEC) Key; in the BASIC Language Reference Manual, it is usually referred to as the CR/LF-EXECUTE (carriage return/line feed) Key.

To input a program line, enter

Example:

```
10 A=10 RETURN(EXEC)
```

To do a quick calculation (evaluate the expression  $25 + 25 = ?$ ), enter

```
PRINT 25 + 25 RETURN(EXEC)
```

#### 4.4 SPACING

Spaces are customarily used between characters in a line for readability, but the system ignores them. For example, 10 READ A,B,C,D is easier to read than 10READA,B,C,D. Both are clear to the system, however. Finally, when a line is stored, extraneous spaces are eliminated automatically to condense user text area.

#### 4.5 TWO MODES OF OPERATION

Your system has two modes of operation, Immediate Mode and Program Mode. In both modes, BASIC keywords are entered on a line (up to 192 keywords long) and entry is terminated by touching the RETURN(EXEC) Key.

##### Immediate Mode

In Immediate Mode, your system can be used as a powerful one-program-line calculator. In this mode, BASIC keywords are entered without a line number and are not saved in memory.

Example:

```
FOR J=2 TO 10 :PRINT J, LOG(J) :NEXT J RETURN(EXEC)
```

When this line is executed, nine values of j and log j are displayed.

Once a program line is entered and the RETURN(EXEC) Key is depressed, the system checks the line for syntax and, providing there are no syntax errors, immediately executes the line which is not retained.

Immediate Mode can be particularly useful for interrogating specific variables during program execution (see example in Section 4.14 on Debugging).

Certain BASIC words cannot be used in the Immediate Mode. They are:

DATA	IF...THEN	ON	RESTORE
DEFFN	IF END THEN	ON ERROR...	RETURN
DEFFN'	% (Image)	PRINTUSING	RETURN CLEAR
GOSUB	KEYIN	READ	STOP

##### Program Mode

In Program Mode, each line must be preceded by a line number from 1 to 4 digits. In this mode, each line entered is saved in memory. Once the line number and program line are entered and the RETURN(EXEC) Key is depressed, the line is checked for syntax and saved in memory. It is not executed immediately. If a syntax error is discovered, the appropriate error code (↑ERR..) is displayed although the line has nonetheless been stored in memory, and can be corrected by either reentering the line number and the program text, or by using EDIT Mode with the EDIT Keys. For example,

```
Enter :10 PRINT 1A,B1,C1 RETURN(EXEC) (The line is checked for syntax  
and stored.)
```

↑ ERR 10 is displayed (1A is not a legal BASIC variable).

:\_

Touch EDIT       \*    (Asterisk replaces colon.)  
      10        \*10 (To enter Edit Mode and recall the line from  
      RECALL        memory.)  
  
                  \*10 PRINT 1A,B1,C1  
                                  (Cursor at end of line when line  
                                  recalled.)

Move the cursor with the Edit Key.

\*10 PRINT 1A,B1,C1

Enter A1

\*10 PRINT A1,B1,C1

Touch RETURN(EXEC) to restore the corrected line and drop out of Edit Mode.

NOTE:

1. It does not matter where the cursor is positioned when you drop out of Edit Mode; the entire line is stored.
2. To recall the original line, press the RECALL Key again before dropping out of Edit Mode.

NOTE:

If a syntax error is found in either mode, the appropriate ↑ERR code is displayed with the up-arrow pointing to the keyword in error. Control of the system is then returned to the user as the colon is displayed.

Program Mode makes it possible for the user to enter a complete program line by line into the system. Line numbers identify the lines and specify the order in which the lines are to be executed. Lines do not have to be entered in order; at execution time, the system automatically processes the lines in order according to the line number.

Line numbers should be assigned with suitable increments between them for the insertion of additional lines. Line numbers can be entered automatically by using the Statement Number (STMT NUMBER) Key which generates line numbers in increments of ten. Line numbers must not be preceded by spaces.



Example:

```
10 FOR J = 2 TO 10 RETURN(EXEC)
20 PRINT J, LOG(J) RETURN(EXEC)
30 NEXT J RETURN(EXEC)
```

The RENUMBER facility (see the BASIC Language Reference Manual) can be used to renumber automatically all lines in a stored program in specifiable increments.

#### 4.6 A KEYSTROKE

A keystroke is a depression of a single key on the keyboard. On the Integrated Alphanumeric/BASIC Keyword Keyboard, the keys contain not only the entire alphabet (uppercase and lowercase), all the decimal digits, and many special characters (such as \$, #, %, etc.) but also complete BASIC words. These BASIC words (such as PRINT or PRINTUSING) can be entered either with a single keystroke or character by character, and are generally stored in memory in a single byte (some BASIC words require two bytes).

#### 4.7 A KEYWORD

A keyword is a BASIC word or ASCII character which is stored as a single byte in memory. For example, the program line:

```
100 PRINT (X + SIN(Y)) :J=1
```

when stored in memory looks like this:

byte	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	
	0	0	S	P	(	X	+	S	Y	)	)	:	J	=	1	CR	S
	1	0	P	R				I									P
			A	I				N									A
			C	N				(									C
			E	T													E

Each box in the diagram contains a keyword. Note that the terminating CR (carriage return) is part of the line. When the line is displayed, spaces are provided (after the line number and the word PRINT) for readability.

#### 4.8 A BASIC STATEMENT

A BASIC statement is any group of words, variables, expressions, etc. valid in Wang 2200 BASIC. A BASIC statement with its arguments, if any, can form a complete program line.

Examples:

```
PRINT A
  J = 1
PRINT 10 + 2
  10 REM
```

#### 4.9 A BASIC COMMAND

A BASIC command is any group of words, variables, expressions, etc. valid in Wang BASIC that are not programmable, i.e., they can be used only in the Immediate Mode.

Examples:

```
RUN
LOAD "PROG1"
SAVE
```

#### 4.10 A BASIC FUNCTION

A BASIC function is a valid BASIC word which is used within a BASIC statement, but cannot stand alone on a program line. A BASIC function must have an argument specified, and can appear as an argument within a BASIC statement.

Examples of BASIC statements:

```
10 READ A$,B$,C
20 PRINT A,B,C;A$
PRINT J+3
```

Examples of BASIC statements with functions as arguments:

```
30 READ STR(A$,9,9)
40 PRINT HEX(51)
50 PRINT SIN (K)
```

SIN, STR and HEX are BASIC functions.

Incorrect examples of function use:

```
50 STR(A$,9,9)
60 SIN (K)
```

These are meaningless uses of the STR and SIN functions and produce error messages.

#### 4.11 ENTERING PROGRAM LINES

A program line is entered by keying in a line number followed by BASIC language text. Each line is terminated by touching the RETURN(EXEC) Key. As each character is keyed in on the keyboard, it is held in the keyboard buffer. When RETURN(EXEC) is touched, the entire line is sent to the CPU and saved.

Examples:

```
10 A = 14+2          RETURN(EXEC)
20 PRINT "A="; A     RETURN(EXEC)
```

#### 4.12 EXECUTING A PROGRAM

Once a program has been saved in memory and no syntax errors have been found, the program can be executed. This is done by executing the RUN command (touch RUN, RETURN(EXEC)).

Example:

```
10A = 14+2          program in memory
20 PRINT "A="; A
```

Touch RUN, RETURN(EXEC). The program is resolved and executed, and the result is displayed as:

```
A = 16
```

The resolution phase occurs immediately before execution, and consists of setting up all tables and buffers in memory. It is possible for an error of execution to occur. In this case, the program line in which the error occurred is displayed with an ERR code. The program must be corrected before reexecution.

Example:

```
5K, J=1 : T=1
10A = (SIN(K) - 4 *J) /T
20 PRINT
```

This program executes normally when run, but if the variable T in line 5 is zero or omitted, an error of execution occurs. The display is:

```
10A = (SIN(K) - 4 * J) /T
↑ERR 03
```

#### NOTE:

Any undefined numeric variable is set to zero and any undefined alpha variable is set to spaces, at resolution time. (An 'undefined' variable is one to which no value is assigned.)

## 4.13 EDITING PROGRAMS

### Deleting a Program Line

An existing program line can be deleted by entering its line number and touching RETURN(EXEC).

Example:

```
10A = 14+2
20 PRINT A+4
30 PRINT A
```

To delete line 30, enter:

```
30 RETURN(EXEC).
```

### Replacing and Changing a Line

An existing line can be replaced by entering its line number, the new text and touching RETURN(EXEC). The previous version of the line is destroyed. A line also can be changed by using the Edit Keys.

### Using Edit Mode

Once you have keyed in a line of text, you can use Edit Mode to change it. To do so, you must enter Edit Mode (by pressing the Edit Key) and use the Edit Mode Keys to move the cursor under the character you wish to change or delete. To insert a character, move the cursor under the character where the insertion is to be made. When deletions or insertions are made, Edit Mode automatically adjusts the line.

Example:

You wish to calculate the value 1000 - 414, but enter

```
PRINT 1000 - 714
                        cursor position
```

(PRINT must be used to display the value.)

Touch Edit Key.                   \*PRINT 1000 - 714

Use Space Left Key to  
position the cursor  
under the 7.                   \*PRINT 1000 - 714

Enter 4.                       \*PRINT 1000 - 414

Touch RETURN(EXEC) to  
compute the value and  
drop out of Edit Mode.       :PRINT 1000 - 414  
                                  :586

If the line is a program line and has been stored in memory, it must be recalled from memory and edited.

Example:

You enter:	10 PRINT 1000 - 714 RETURN(EXEC)
The line is stored in memory.	
Touch EDIT.	*
Enter the line number.	*10
Touch RECALL.	*10 PRINT 1000 - 714 Cursor at end of recalled line.
Move the cursor.	*10 PRINT 1000 - <u>7</u> 14
Enter 4.	*10 PRINT 1000 - <u>4</u> 14
Touch RETURN(EXEC) to store corrected line in memory and drop out of Edit Mode.	:10 PRINT 1000 - 414 :

If you make an error in correcting a line recalled from memory, you can recall the original line so long as the new line has not been stored in memory.

Example:

The incorrect line is in memory.	10 PRINT 1000 - 714
Enter Edit Mode and recall it.	
Edit	*
10	*10
RECALL	*10 PRINT 1000 - 714
Move the cursor (too many spaces to the left).	*10 PRINT 10 <u>00</u> - 714
Enter 4.	*10 PRINT 1004 <u>-</u> 714
Touch RECALL (to recall the original line).	*10 PRINT 1000 - 714

```
Correct the
line and drop
out of Edit
Mode. (Move
cursor, enter 4,
and touch      :10 PRINT 1000 - 414
RETURN(EXEC).) :_
```

NOTE:

Edit Mode can only be used when the Console Output device is the CRT (CO = 005) and its line length is set at 64 (see SELECT in the BASIC Language Reference Manual). These are the values automatically set when the system is Master Initialized, but they can be changed with a SELECT statement.

#### 4.14 LISTING PROGRAMS

##### Listing a Program on the CRT

When a program has been entered, it can be reviewed by using the LIST command. LIST RETURN(EXEC) lists the entire program stored. LIST S RETURN(EXEC) lists the program 16 lines at a time; to see the next 16 lines, touch RETURN(EXEC) again. LIST (line number) RETURN(EXEC) lists the specified line only.

##### Listing a Program on a Printer

To obtain a listing of a program on a printer, turn on the printer and SELECT it manually (push the SELECT switch). The SELECT lamp must be lit. Enter on the keyboard:

```
SELECT LIST 215 RETURN(EXEC)
```

This changes the default output address from the CRT (005) to the printer (215). Then enter

```
LIST RETURN(EXEC)
```

Output formerly displayed on the CRT is output to the printer. To return output to the CRT, enter

```
SELECT LIST 005 RETURN(EXEC)
```

Further discussion of the SELECT statement and its various parameters can be found in the BASIC Reference Manual and in the peripheral manuals.

##### Debugging

A number of features to aid in debugging programs are available on your system.

Immediate Mode permits you to interrogate variables at any time during program execution.

Example:

```
10A = 10
20B = B + A
30 GOTO 20
```

Store this program in memory (key in each line and touch RETURN(EXEC)). To execute the program, touch

```
RUN RETURN(EXEC)
```

Since the program is a continuous loop, B is continuously incremented; there is no PRINT statement in the program so no display appears on the CRT. To interrogate the variables A and B, touch

```
HALT/STEP
```

(this halts program execution) and enter the Immediate Mode Statement

```
PRINT A,B RETURN(EXEC)
```

Current values of A and B are displayed.

Immediate Mode can be used to change the current value of a variable.

Example:

After performing the previous exercise, enter a value for A in Immediate Mode. For example,

```
A = 10.51 RETURN(EXEC)
```

To continue execution starting with line 20, enter

```
RUN 20 RETURN(EXEC)
```

Touch HALT/STEP

```
Enter PRINT A,B RETURN(EXEC)
```

The new values for A and B are displayed.

An Immediate Mode GOTO can be used to set execution pointers to a particular line; it does not, however, initiate execution, but must be followed by a touch of the HALT/STEP Key. (Using the RUN command without a line number initiates execution at the first program line.)

Note:

An Immediate Mode GOTO cannot be used unless program execution has been initiated once with a RUN command; other use of an Immediate Mode GOTO results in a SYSTEM ERROR! diagnostic.

Example:

```
10A = 10:B = 25
20C = A - B
30D = D + C
40 PRINT A, B, C, D
50 GOTO 20
```

Store this program in memory (key in each line and touch RETURN(EXEC)). Begin execution by touching

```
RUN RETURN(EXEC)
```

The variable D increments continuously; the first line of output is:

```
10 25 -15 -15
```

Touch HALT/STEP

to halt program execution. Enter an Immediate Mode GOTO:

```
GOTO 30 RETURN(EXEC)
```

This sets the execution pointer at line 30. Touch

```
HALT/STEP
```

Line 30 is displayed and executed.

```
30 D = D + C
```

Touch HALT/STEP

The next line is displayed and executed. (The value in the last column depends on how many loops have been completed.)

```
40 PRINT A, B, C, D
```

```
10 25 -15 -1065
```

Touch HALT/STEP

The next line is displayed and executed.

```
50 GOTO 20
```

To drop out of HALT/STEP Mode, enter CONTINUE RETURN(EXEC).

The RUN command can be used to start execution at a given program line.

Example:

```
RUN 20 RETURN(EXEC)
```

This command starts execution at line 20.



TRACE automatically displays intermediate values, internal program transfers (i.e., branches in GOTO, GOSUB statements, FOR/NEXT loops, etc.), and when an alpha function is executed on the left side of an equation, the function name.

Example:

Note:

Before beginning this example, clear any other program from memory by entering:

CLEAR RETURN(EXEC)

PROGRAM LINE	MEANING
10 A\$ = "ABCDEF":K=1	Assigns character string to A\$, the value 1 to K.
20 GOTO 40	Branches to line 40.
30 STR (B\$, 3, K) = A\$	Assigns K characters of A\$ to character 3, etc. of B\$.
40 HEXPRINT A\$, B\$: K = K+1	Prints hexcodes of characters in A\$ and B\$; increments K.
50 PRINT A\$, B\$	Outputs characters of A\$ and B\$.
60 STOP	Halts program execution.
70 GOTO 30	Branches back to line 30.

Store this program in memory (key in each line and touch RETURN(EXEC)). Turn on Trace Mode by entering:

TRACE RETURN(EXEC)

Execute the program: RUN RETURN(EXEC)

The first display is:

TRACE output	A\$ = ABCDEF
TRACE output	K = 1
TRACE output	TRANSFER TO 40
program output	414243444546202020202020202020
program output	202020202020202020202020202020
TRACE output	K = 2
program output	ABCDEF
program output	STOP
	:

(The STOP statement in line 60 halts program execution.) To proceed, enter:

```
CONTINUE RETURN(EXEC)

TRANSFER TO 30
STR(
TRACE output  B$ = ABCDEF
                41424344454620...
                20204142202020...
                K=3
                ABCDEF   AB
                STOP
                :_
```

```
Enter:         CONTINUE RETURN(EXEC)
                TRANSFER TO 30
                STR(
TRACE output  B$=ABCDEF
                41424344454620...
                20204142432020...
                K=4
                ABCDEF   ABC
                STOP
                :_
                etc.
```

You can continue to execute the program until  $K = 15$ , although after  $K = 7$ , there are no further changes to  $A\$$  or  $B\$$  (all six characters of  $A\$$  have been used).

NOTE:

Once  $K = 15$ , a program error (ERR41) occurs; the error arrow points to the variable  $K$ . The error is "illegal STR argument" since the value of line 30 becomes:

```
30 STR (B$, 3, 15)
```

i.e., 17 bytes.  $B\$$  contains only 16 bytes (set at RUN time); see STR and SELECT in the BASIC Language Reference Manual.

### Programmable Pause

The Programmable Pause can be used with TRACE to review the tracing of a program without operator intervention.

Example:

Using lines 10 through 70 of the previous program, remove line 60.

Enter:

```
60 RETURN(EXEC)
```

To view the new version of the program, enter:

```
LIST RETURN(EXEC)
```

To turn on Trace Mode (if TRACE is not already on), enter:

```
TRACE RETURN(EXEC)
```

To set a pause of one-half second between the display of each line, enter:

```
SELECT P3 RETURN(EXEC)
```

Enter: 

```
RUN RETURN(EXEC)
```

The program executes and TRACE output is displayed with a pause of one-half second between each line. Execution terminates when K = 15 with ERR41, illegal STR argument (see note for previous example).

To remove Trace Mode, enter:

```
TRACE OFF RETURN(EXEC)
```

To remove the pause, enter:

```
SELECT P RETURN(EXEC)
```

or

```
SELECT P0 RETURN(EXEC)
```

To rerun, touch 

```
RUN RETURN(EXEC)
```

(For further information on all these statements and commands, see the BASIC Language Reference Manual.)

#### 4.15 SUMMARY

You now have the basic information on how to turn on your system, enter program lines, and execute programs. See the BASIC Reference Manual for information on all BASIC words, their syntax and meaning, and for the inexperienced user, the Wang BASIC Programming Manual is recommended reading.

To store programs on tape cassette or disk, see the SAVE and SAVE DC commands in the manuals for cassettes or disk.

#### 5. SYSTEM MANUALS

Several manuals accompany your WCS/30 and provide you with the information necessary to properly and effectively utilize your system. The following information describes the contents of these manuals.

## 5.1 WANG BASIC LANGUAGE PROGRAMMING MANUAL

The Wang BASIC Language Programming Manual is provided with your WCS/30 as an introduction to the BASIC language as it is utilized in the system, and it is designed for the user who is familiar neither with BASIC, nor with the WCS/30.

The manual is chiefly a programming text, and deals only with the most basic elements of the WCS/30 hardware, namely the Central Processing Unit, the CRT Display and the BASIC Keyword Keyboard.

The Wang Computer System (WCS/30) has two operating modes, the Immediate Mode and the Programming Mode. Part I of this manual describes the Immediate Mode operations, and includes such techniques as the use of single statement lines and multi-statement lines, how to execute simple and complex calculations, how to format a display, and how to perform repetitive calculations with a single line (looping).

Once the techniques of the Immediate Mode are mastered, it is a simple matter to progress to using the WCS/30 as a computer. Part II describes Program Mode operations. The fundamental methods used for writing programs are explained and the capabilities of the BASIC language are illustrated.

Part III discusses a number of special BASIC language features available on the WCS/30. These special BASIC language features can be used for the manipulation of numeric and alphanumeric variables and arrays, for accessing the hexadecimal form of any value, and for bit and byte operations such as performing binary addition or obtaining binary complements, etc.

## 5.2 BASIC LANGUAGE REFERENCE MANUAL

In addition to the Wang BASIC Language Programming Manual, the BASIC Language Reference Manual is provided with your system. It is not recommended that the Reference Manual be used for instructional purposes. It should be used as a quick refresher once you are familiar with the WCS/30, or as a means of familiarizing yourself with the BASIC language features available on your system (if you are already somewhat familiar with BASIC or programming in general).

Thus, the BASIC Language Reference Manual is designed for users who are already quite familiar with a Wang system and its BASIC language. The manual is divided into sections, some of which summarize operational features applicable to the WCS/30 and others which present functionally related BASIC language statements. The non-programmable commands in Section VI and the BASIC statements in Section VII are arranged in alphabetical order for user convenience in locating a desired command or statement, and each statement or command is provided with a General Form (to demonstrate syntax), a Purpose (to describe its function or operation), and some examples.

## 5.3 MATRIX STATEMENTS

This manual provides quick and concise answers to questions concerning the Matrix Statements Supplement, and assumes that the reader is familiar with

the general operation of a Wang system and its BASIC language. Section I provides information on Array Dimensioning, Array Redimensioning, and Matrix Statement Rules, and Section II deals with the operation of the fourteen matrix statements available on the WCS/30.

#### 5.4 GENERAL I/O INSTRUCTION SET

This manual describes the five BASIC language statements that belong to the General I/O Instruction Set and is designed for readers already familiar with a Wang system and its BASIC language. Chapter 1 gives an overview of the General I/O Instruction Set, while Chapter 2 discusses data conversion using \$TRAN, \$PACK, or \$UNPACK, and Chapter 3 discusses I/O operations using \$IF ON and \$GIO.

#### 5.5 CHARACTER EDIT REFERENCE MANUAL

This manual provides information concerning the operation of the Character EDIT Mode, and expects that the user who reads this manual is already familiar with a Wang system and its supporting documentation, particularly the BASIC Reference Manual and the BASIC Programming Manual. A self-teaching approach is followed, and each key used is presented in alphabetical order and described with examples of its operation.

#### 5.6 SORT STATEMENTS

This manual provides information concerning the SORT Statements available on your WCS/30, and assumes the reader is thoroughly familiar with the operation of a Wang system, has access to the BASIC Reference Manual and the BASIC Programming Manual, and possesses a general knowledge of data processing techniques. Section 1 provides general information on Fundamentals, Arrays, Internal Storage, Sort/Merge Operations, and Descending Sorts while Section 2 discusses the operation of the Sort Statements which include six matrix statements for flexible and rapid searching, moving and sorting data, and are particularly effective in speeding up sorting, performing multi-file merges and executing multi-pass searches over large bodies of data.

#### 5.7 DISK MEMORY REFERENCE MANUAL

The Disk Memory Reference Manual covers the physical characteristics of each 2200 Series disk unit, as well as the BASIC instruction set used to control disk operations. Chapter 1 of the manual introduces the concept of random-access storage, and briefly explains the physical hardware of each disk model. Chapters 2-4 cover general information, formatting procedures, and addressing techniques for the disk units. Wang's built-in set of disk file maintenance procedures, collectively known as the Automatic File Cataloging procedures, are explained in Chapters 5 through 8, while a separate group of statements available for directly addressing sectors on disk, the Absolute Sector Addressing procedures are covered in Chapters 9 and 10. Chapter 11, finally, deals with the operation and programming of the disk multiplexers. Disk timing information, explanations of error messages, maintenance information, a bibliography, and a glossary are collected in the Appendices.

## 5.8 2221W LINE PRINTER REFERENCE MANUAL

This manual provides answers to questions concerning the operation of the Model 2221W Line Printer and has been divided into several sections covering all the operational features of the Line Printer. Section I contains general information on the Printer. Section II describes device selection and the SELECT statement. Section III demonstrates how to format printed output. Section IV describes the use of HEX codes, and Section V describes the Vertical Format Tape. Hexadecimal codes, the Printer character set and specifications are located in the Appendices.

## 6. SOFTWARE

Wang Laboratories, Inc. provides an extensive software library which is continually being updated and expanded to meet the changing needs of the user. Software currently available in the 2200 Series are also compatible with the WCS/30, thereby making available a vast library of programs that have been developed over the years. Some of the software contained in our library include: structural packages, statistical packages, and accounting packages.

## 7. OPTIONS AND PERIPHERALS

### Memory

Additional 8,192(8K) bytes blocks. (Memory is available in 8K increments from 16K to 32K.)

### CPU/Keyboard/Display Options

Option 20A Up to 9 I/O slots  
Option 31 Audio Signal for 2220 & 2226 CRT  
Option 32 Keyboard Clicker

### Display Peripheral

Model 2292 Auxiliary Display (with cable up to 500')

### Output Peripherals

Model 2201 Output Writer  
Model 2202 Plotting Output Writer  
Model 2212 Analog Flatbed Plotter (10" x 15")  
Model 2231 Line Printer (80 column)  
Model 2232A Digital Flatbed Plotter (31" x 48")  
Model 2261 High Speed Printer (132 column)  
Model 2291 Digital Flatbed Plotter Stand

### Interface Controllers

Model 2207A I/O Interface Controller (RS-232-C) Selectable Baud  
Model 2227 Asynchronous Telecommunications Controller  
Model 2227N Null Modem for 2227  
Model 2250 I/O Interface Controller (8 bit parallel)

Model 2252A Scanning Input Interface Controller (BCD 1-10 digit parallel)

### Input Peripherals

Model 2203 Punched Tape Reader  
Model 2234A Hopper-Feed Punch Card Reader  
Model 2244A Hopper-Feed Mark Sense/Punch Card Reader  
Model 2262-1 Digitizer 20" x 20" Tablet  
Model 2262-2 Digitizer 30" x 40" Tablet (special order)  
Model 2262-3 Digitizer 36" x 48" Tablet (special order)  
Annunciator option for Digitizer

### Mass Storage Peripherals

Model 2209 Nine-Track Tape Drive  
Model 2217 Single Tape Cassette Drive  
Model 2218 Dual Tape Cassette Drive  
Model 2224-2 Disk Multiplexer (for 2 CPU's)  
Model 2244-3 Disk Multiplexer (for 3 CPU's)  
Model 2224-4 Disk Multiplexer (for 4 CPU's)  
Model 2230MXA Daisy-Chain-Type Disk Multiplexer (1st CPU)  
Model 2230MXB Daisy-Chain-Type Disk Multiplexer (2nd, 3rd, or 4th CPU)  
Model 2270-2 Dual Removable Diskette Disk Drive 524,288 bytes  
Model 2270-3 Triple Removable Diskette Disk Drive 786,432 bytes  
Model 2260 Fixed/Removable Disk Drive 10,027,008 bytes

## 8. SPECIFICATIONS

### WCS/30 Central Processing Unit

\*Average Execution Time (Milliseconds)

Add/Subtract.....	0.8
Multiply.....	3.8
Divide.....	7.4
Square Root.....	46.4
$e^x$ .....	25.3
$\text{LOG}_e x$ .....	23.2
$xy$ .....	45.4
Integer Value.....	0.24
Absolute Value.....	0.25
Sign.....	0.25
SINE.....	38.3
COSINE.....	38.9
TANGENT.....	78.5
ARCTANGENT.....	72.5
Read/Write Cycle.....	1.6 $\mu$ sec

\*Average execution times are determined using random number arguments with 13 digits of precision. Speeds are faster in calculations with arguments of less precision.

CRT 16 lines  
64 characters

Memory Size: 16K, 24K, 32K

Subroutine and FOR/NEXT loop stacking - 50

WCS/30 Fixed/Removable Disk Drive

Storage Capacity

Platters..... 2  
Sectors per Platter..... 9,792  
Total Sectors..... 19,584  
Bytes per Platter..... 2,506,752  
Total Bytes..... 5,013,504

Performance

Rotation Speed..... 1,500 RPM

Access Time (Position Head to Track)

Minimum (one track)..... 9 ms  
Average (across one-half available tracks). 41 ms  
Maximum (across all available tracks)..... 82 ms

Latency Time (Platter Rotation to Sector on Track)

Average (one sector read/write one-half  
revolution)..... 20 ms

MOVE/COPY Time

Entire Disk Platter..... 4.9 min (approx)

Raw Transfer Rate..... 195,000 bytes/sec

WCS/30 Diskette Disk Drive

Storage Capacity

Platter..... 1  
Sectors per Platter/Total Sectors..... 1,024  
Bytes per Platter/Total Bytes..... 262,144

Performance

Rotation Speed..... 375 RPM

Access Time (Position Head to Track)

Minimum (one track)..... 15 ms  
Average (across one-half available tracks) 401 ms  
Maximum (across all available tracks)..... 803 ms

Latency Time (Platter Rotation to Sector on Track)

Average (one sector read/write  
one-half revolution ) ..... 80 ms  
Additional sectors in the same revolution. 40 ms

Read/Write Time

One 256 byte sector (including  
CPU, Controller overhead)..... 21.8 ms



MOVE/COPY TIME  
 Entire Disk Platter..... 2 min (approx)  
 Raw Transfer Rate..... 31,000 bytes/sec

Size of WCS/30 Console & CPU & Storage

Height..... 40 in. (101.6 cm)  
 Depth..... 30 in. (76.2 cm)  
 Width..... 72 in. (182.84 cm)

Weight

385 lb (174.6 kg) (approx)

Power Requirements

115 or 230 VAC + 10%  
 50 or 60 Hz + 1/2 Hz  
 Wattage: 900W

Fuses

Cabinet	10A (115V and 230V)
CPU	3A SB (115V) 1.5A SB (230V)
CRT/Keyboard	1.5A (115V) 1A (230V)
Diskette	4A (115V and 230V)
Fixed/Removable Disk	7A (115V) 3.5A (230V)
Printer	4A SB (115V) 2A SB (230V)

Operating Environment

50°F to 90°F (10°C to 32°C)  
 20% to 80% Relative Humidity  
 (Recommended Relative Humidity: 40% to 60%, non-condensing)

9. PREVENTIVE MAINTENANCE INFORMATION

It is recommended that your equipment be serviced annually. Wang Laboratories offers a Maintenance Agreement which automatically ensures proper servicing. If no Maintenance Agreement is acquired, all servicing must be requested by the customer. A Maintenance Agreement protects your investment and offers the following benefits:

Preventive Maintenance

Annually, your equipment is inspected for worn parts, lubricated, cleaned and updated with engineering changes, if any. Preventive maintenance minimizes "downtime" by anticipating repairs before they are necessary.

Fixed Annual Cost:

When you buy a Maintenance Agreement, you issue only one purchase order for service for an entire year and receive one annual billing, or more frequent billing, if desired.

Further information regarding your Maintenance Agreement can be acquired from your local Wang Sales/Service Office.

NOTE:

Wang Laboratories, Inc. can neither guarantee nor honor maintenance agreements for any equipment modified by the user. Damage to equipment incurred as a result of such modification becomes the financial responsibility of the user.

10. CONCLUSION

We are sure you will find your WCS/30, both in workmanship and user-design features, to be the finest small computer available. If, for any reason, you need assistance in the operation of your system or if you have any comments or suggestions, please do not hesitate to use the (self-mailer) Customer Comment Form provided for your convenience on the last page of your manuals.

To help us to provide you with the best manuals possible, please make your comments and suggestions concerning this publication on the form below. Then detach, fold, tape closed and mail to us. All comments and suggestions become the property of Wang Laboratories, Inc. For a reply, be sure to include your name and address. Your cooperation is appreciated.

700-3856

TITLE OF MANUAL: **WCS/30 INTRODUCTION AND INSTALLATION GUIDE**

COMMENTS:

Fold

Fold



Fold

FIRST CLASS  
PERMIT NO. 16  
Tewksbury, Mass.

**BUSINESS REPLY MAIL**  
NO POSTAGE STAMP NECESSARY IF MAILED IN THE UNITED STATES

— POSTAGE WILL BE PAID BY —

**WANG LABORATORIES, INC.**  
836 NORTH STREET  
TEWKSBURY, MASSACHUSETTS 01876

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

Attention: Marketing Department

Fold

Cut along dotted line.

Printed in U.S.A.



**WANG LABORATORIES  
(CANADA) LTD.**  
49 Valleybrook Drive  
Don Mills, Ontario M3B 2S6  
TELEPHONE (416) 449-2175  
Telex: 069-66546

**WANG EUROPE, S.A.**  
Buurtweg 13  
9412 Ottergem  
Belgium  
TELEPHONE 053/704514  
Telex: 26077

**WANG DO BRASIL  
COMPUTADORES LTDA.**  
Rua Barao de Lucena No. 32  
Botafogo ZC-01 20,000  
Rio de Janeiro RJ  
Brasil  
TELEPHONE 226-4326  
Telex: 2123296

**WANG COMPUTERS  
(SO. AFRICA) PTY. LTD.**  
Corner of Allen Rd. & Garden St.  
Bordeaux, Transvaal  
Republic of South Africa  
TELEPHONE (011) 48-6123

**WANG INTERNATIONAL  
TRADE, INC.**  
836 North Street  
Tewksbury, Massachusetts 01876  
TELEPHONE (617) 851-4111  
TWX 710-343-6769  
Telex: 94-7421

**WANG SKANDINAVISKA AB**  
Pyramidvägen 9A  
S-171 36 Solna,  
Sweden  
TELEPHONE 08-826814  
Telex: 11498

**WANG NEDERLAND B.V.**  
Damstraat 2  
Utrecht, Netherlands  
(030) 93-09-47  
Telex: 47579

**WANG PACIFIC LTD.**  
902-3 Wong House  
26-30, Des Voeux Road, West  
Hong Kong  
TELEPHONE 5-435229  
Telex: 74879

**WANG INDUSTRIAL CO., LTD.**  
110-118 Kuang-Fu N. Road  
Taipei, China  
TELEPHONE 784181-3  
Telex: 21713

**WANG GESELLSCHAFT M.B.H.**  
Formanekgasse 12-14  
A-1190 Vienna, Austria  
TELEPHONE 36.32.80  
Telex: 74640

**WANG S.A./A.G.**  
Markusstrasse 20  
CH-8042 Zurich 6  
Switzerland  
TELEPHONE 41.1.26.6866  
Telex: 59151

**WANG COMPUTER PTY. LTD.**  
55 Herbert Street  
St. Leonards, 2065  
Australia  
TELEPHONE 439-3511  
Telex: 25469

**WANG ELECTRONICS LTD.**  
1 Olympic Way, 4th Floor  
Wembley Park,  
Middlesex, England  
TELEPHONE 01/903/6755  
Telex: 923498

**WANG FRANCE S.A.R.L.**  
Tour Gallieni, 1  
78/80 Ave. Gallieni  
93170 Bagnolet, France  
TELEPHONE 33.1.3602211  
Telex: 68958F

**WANG LABORATORIES GMBH**  
Moselstrasse 4  
6000 Frankfurt AM Main  
West Germany  
TELEPHONE (0611) 252061  
Telex: 04-16246

**WANG DE PANAMA (CPEC) S.A.**  
Apartado 6425  
Calle 45E, No. 9N. Bella Vista  
Panama 5, Panama

**WANG COMPUTER SERVICES**  
836 North Street  
Tewksbury, Massachusetts 01876  
TELEPHONE (617) 851-4111  
TWX 710-343-6769  
Telex: 94-7421

**DATA CENTER DIVISION**  
20 South Avenue  
Burlington, Massachusetts 01803  
TELEPHONE (617) 272-8550

**WANG**

LABORATORIES, INC.

836 NORTH STREET, TEWKSBURY, MASSACHUSETTS 01876. TEL (617) 851-4111, TWX 710 343 6769. TELEX 94-7421

Printed in U.S.A.  
700-3856  
4-76-4C

Price: see current list